




CUSTOMER COLLABORATION MADE EASY

iBwave Viewer is a free read-only version of our wireless network design software for your customers to view design files in 3D and run their own reports.

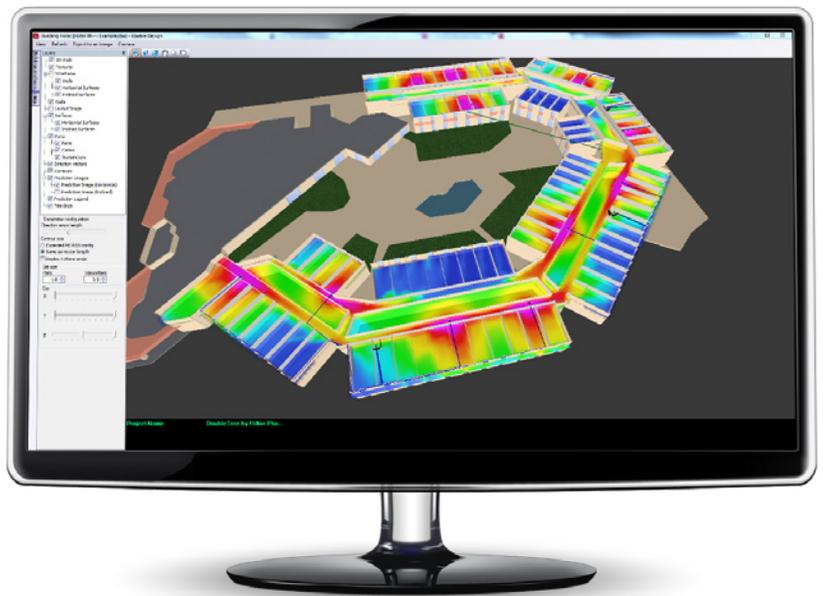

Open and view design projects via the Cloud as read-only

- ✔ **Always stay connected to your projects via the cloud.** Share projects in read-only mode. When you want to share a project with your customer, share it from iBwave Design and they will be sent a direct link to the project. The project will open in Viewer in read-only mode.
- ✔ **View design plans by building or floor.** When a project opens it will display the cover page, design plan for the building, and the design for each floor plan.
- ✔ **Select visible layers.** Select what layers of the design to view for each floor plan (examples: view with prediction/without prediction, view with parts/without part, etc).
- ✔ **Select visible output maps.** Let your customer select which output map they want to see for each floor plan. (examples: view overlap zone, CCI, SNR, etc).
- ✔ **Export Project.** Your customer can export individual floor plan designs or the entire plan to an image file.



